




Measuring for a flyscreen

To help you take the correct measurements and order items the correct size please follow the instructions below:


Hinged and Liftout screens

- 1 Measure the aperture (the opening) width & height.
- 2 Measure the frame space available at the sides and top and bottom.
- 3 Add a minimum of 10mm on to the width and height (this allows 5mm overlap each side). Always ensure you have 20mm of space each side to fit the hinges & catch. If you have more frame available increase the overlap.

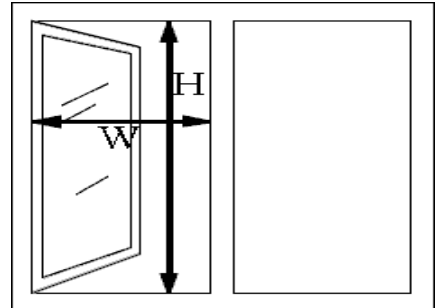


Door screens

- 1 Measure the aperture (the opening) width & height.
- 2 Measure the frame space available at the sides and top.
- 4 Add a minimum of 10mm on to the width and 5mm to the height (this allows 5mm overlap each side). Always ensure you have 25mm of space each side to fit the hinges & catch. If you have more frame available increase the overlap.

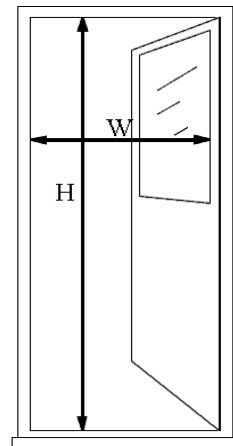

Strip Curtains

- 1 Measure the aperture (the opening) width & height.
- 2 Measure the frame space available at the sides and top.
- 3 Add a minimum of 10mm to the width and 35mm to the height. This allows 5mm overlap at the sides and enough room for the holder at the top and a gap at the bottom to allow the strips to swing without making contact with the floor.

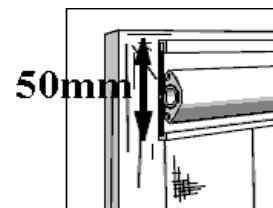

Sliding screens & Rollers

- 1 Measure the width & height of the reveal in three different places.
- 2 Take the smallest sizes and subtract 3-5mm to allow for fitting.

NOTE THE ABOVE IS INTENDED AS A GUIDE, INTENDED TO COVER BASIC MEASURING ONLY

Pestatak Ltd Pean Hill Park Pean Hill Nr Whitstable CT5 3BJ tel: 01227 768189 fax: 01227 787298

Web shop: pestatak.co.uk

email: mail@pestatak.co.uk

39 YEARS OF SAFE SERVICE